

	The ORANGE LED flashes quickly.	A DIP-switch was changed without confirmation.	<ol style="list-style-type: none"> <li>1 Confirm the DIP-settings by a long push on the push button.</li> </ol>
	The ORANGE LED flashes 1 x.	The sensor signals an internal fault.	<ol style="list-style-type: none"> <li>1 Cut and restore power supply.</li> <li>2 If orange LED flashes again, replace sensor.</li> </ol>
	The ORANGE LED flashes 2 x.	Irregularities in the power supply	<ol style="list-style-type: none"> <li>1 Check power supply.</li> <li>2 Check wiring.</li> </ol>
	The ORANGE LED flashes 4 x.	The sensor receives not enough IR-energy.	<ol style="list-style-type: none"> <li>1 Use the 1 m prism if possible (accessory).</li> <li>2 Check the angle of the IR-curtains.</li> </ol>
	The ORANGE LED flashes 5 x.	The sensor receives too much IR-energy.	<ol style="list-style-type: none"> <li>1 Use a low energy prism if possible (accessory).</li> <li>2 Check the angle of the IR-curtains.</li> </ol>
	The ORANGE LED is on.	The sensor encounters a memory problem.	<ol style="list-style-type: none"> <li>1 Cut and restore power supply.</li> <li>2 If orange LED lights up again, replace sensor.</li> </ol>
	The RED LED flashes quickly after an assisted setup.	The sensor sees the door during the assisted setup.	<ol style="list-style-type: none"> <li>1 Check the angle of the IR-curtains.</li> <li>2 Launch a new assisted setup. <b>Attention: Do not stand in the detection field!</b></li> </ol>
	The RED LED lights up sporadically.	The sensor vibrates.	<ol style="list-style-type: none"> <li>1 Check if the sensor is fastened firmly.</li> <li>2 Check position of prism and cover.</li> </ol>
		The sensor sees the door.	<ol style="list-style-type: none"> <li>1 Launch an assisted setup and adjust the IR angle.</li> </ol>
		The sensor is disturbed by lamps or another sensor.	<ol style="list-style-type: none"> <li>1 Choose the critical environment presetting (DIP 1+2).</li> </ol>
		The sensor is disturbed by the rain.	<ol style="list-style-type: none"> <li>1 Choose the critical environment presetting (DIP 1+2).</li> </ol>
	The GREEN LED lights up sporadically.	The sensor is disturbed by rain and/or leaves.	<ol style="list-style-type: none"> <li>1 Choose the critical environment presetting (DIP 1+2).</li> </ol>
		Ghosting	<ol style="list-style-type: none"> <li>1 Change radar antenna angle.</li> </ol>
		The sensor vibrates.	<ol style="list-style-type: none"> <li>1 Check if the sensor is fastened firmly.</li> <li>2 Check position of cable and cover.</li> </ol>
		The sensor sees the door or other moving objects.	<ol style="list-style-type: none"> <li>1 Remove the objects if possible.</li> <li>2 Change radar field size.</li> </ol>
	The LED is off.		<ol style="list-style-type: none"> <li>1 Check connections to test output.</li> <li>2 If your door controller is not able to test the sensor, connect the red and blue cable to the power supply.*</li> </ol>
	The reaction of the door does not correspond to the LED-signal.		<ol style="list-style-type: none"> <li>1 Change the activation mode of relay R1 (DIP 4).</li> </ol>

\*excludes EN 16005-conformity of the door system



**CE** BEA hereby declares that the VIO-DT1&2 is in conformity with the basic requirements and the other relevant provisions of the directives 1999/5/EC and 2006/42/EC.  
 Notified Body for EC inspection: 0044 - TÜV NORD CERT GmbH, Langemarckstr. 20, D-45141 Essen  
 EC-type examination certificate number: 44 205 13 089601  
 Angleur, June 2013 Pierre Gardier, Authorized representative and responsible for technical documentation  
 The complete declaration of conformity is available on our website: [www.bea-pedestrian.be](http://www.bea-pedestrian.be)  
 Only for EC countries: According to the European Guideline 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE)

User's Guide for product version 0100 and higher  
 See product label for serial number


# VIO-DT 1&2

Opening & safety sensor for automatic sliding doors

VIO-DT1: energy-saving unidirectional sensor  
 VIO-DT2: bidirectional sensor



## DESCRIPTION

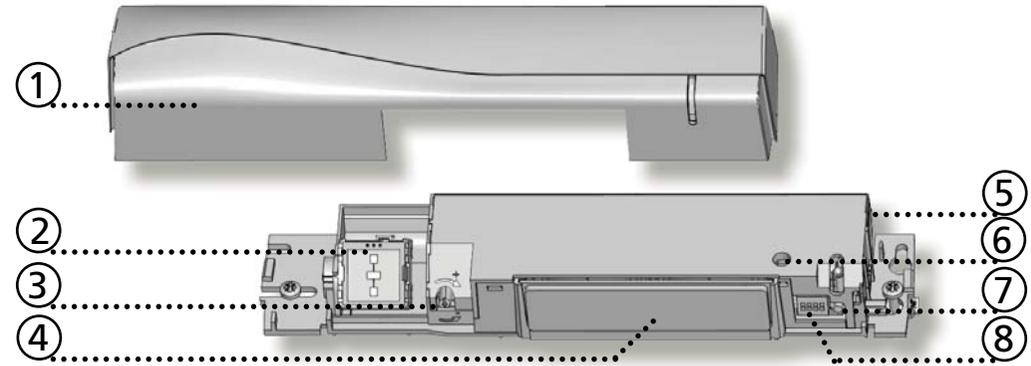

- |                                |  |
|--------------------------------|--|
| 1. cover                       | 5. main connector                                    |
| 2. radar antenna (wide field)  | 6. IR-angle adjustment                               |
| 3. radar field size adjustment | 7. push button for setup or DIP-setting confirmation |
| 4. IR-prism (2 m)              | 8. DIP-switch  |

## TECHNICAL SPECIFICATIONS


Supply voltage:	12 V - 30 V DC -5%/+10% (to be operated from SELV compatible power supplies only)
Power consumption:	< 2.2 W
Mounting height:	1.8 m to 3 m
Sensitivity of the test input:	< 1 V : Log. L; > 10 V: Log. H (max. 30 V)
Temperature range:	-25 °C to +55 °C
Degree of protection:	IP54
Noise:	< 70 dB
Expected lifetime:	20 years
Norm conformity:	R&TTE 1999/5/EC; MD 2006/42/EC; LVD 2006/95/EC; ROHS 2 2011/65/EU; EN 16005:2012; EN 12978:2009; EN IEC 62061:2005 SIL2, EN 61496-1:2012 ESPE Type 2; EN ISO 13849-1:2008 PL «C» CAT.2 (under the condition that the door control system monitors the sensor at least once per door cycle)



Detection mode:	Motion Min. detection speed: 5 cm/s	Presence Typical response time: <256 ms
Technology:	Microwave doppler radar Transmitter frequency: 24.150 GHz Transmitter radiated power: < 20 dBm EIRP Transmitter power density: < 5 mW/cm2	Active infrared with background analysis Spot diameter: 0.1 m (typ) Number of spots: 24 Number of curtains: 2
Angle:	From 15 ° to 50 ° vertical (adjustable)	From -4 ° to +4 ° (adjustable)
Output:	Solid-state-relay (free of potential, free of polarity) Max. contact current: 100 mA Max. contact voltage: 42 V AC/DC	Solid-state-relay (free of potential, free of polarity) Max. contact current: 100 mA Max. contact voltage: 42 V AC/DC
Hold time output signal:	0.5 s	0.3 s to 1 s (not adjustable)
Response time on test request:		Typical: < 5 ms

Specifications are subject to changes without prior notice. All values measured in specific conditions.


# 1 MOUNTING & WIRING

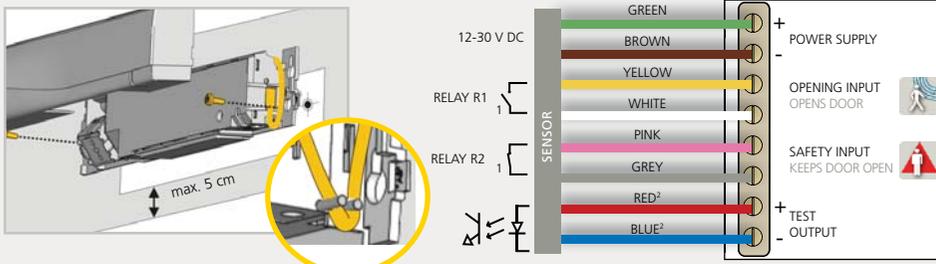

<sup>1</sup> Output status when sensor is operational  
<sup>2</sup> For compliance with EN 16005, connection to door controller test output is required.


The door control unit and the door cover profile must be correctly earthed.

# 2 RADAR FIELD - OPENING IMPULSE

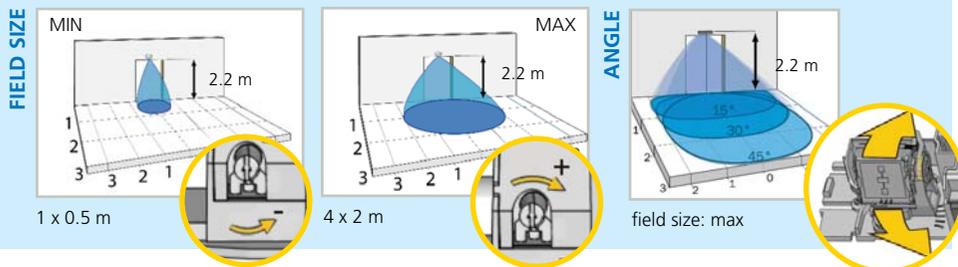


The size of the detection field varies according to the mounting height of the sensor.

# 3 INFRARED FIELD - SAFETY

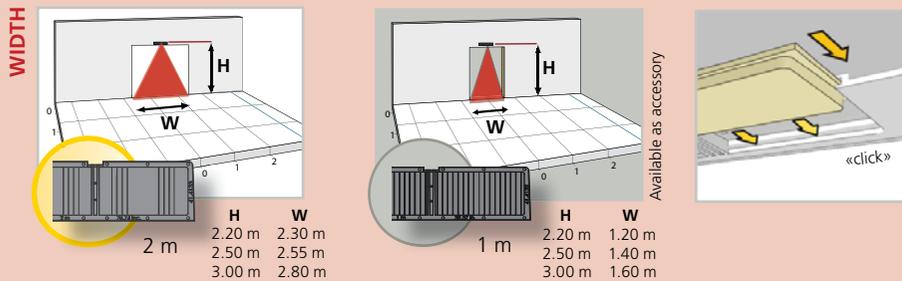

Detection field width indicated according to conditions defined in EN 16005 and including dimension of test body CA.

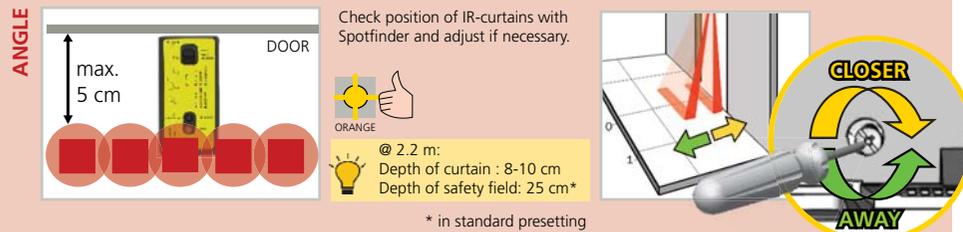


# 4 SETTINGS (by DIP-switch)



<sup>1</sup> Can only be used if DIP 4 is OFF.  
<sup>2</sup> Not available on VIO-DT2. If selected, the presetting «standard» is applicable.  
<sup>3</sup> Enhanced IR-immunity which excludes EN 16005-conformity of the door system.  
<sup>4</sup> The opening relay (R1) is activated in case of detection in the radar or infrared field.

- standard:** standard environments (factory setting)
- critical environment:** enhanced immunity (rain, snow, lamps...) and only 1 IR-curtain activated.
- shopping street:** optimized for narrow sidewalks > the opening relay (R1) is activated in case of detection in radar + IR-field.
- hospital:** optimized for persons with reduced mobility (PRM)

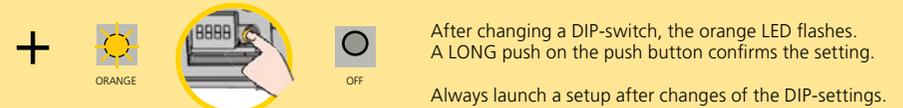

# 5 SETUP

⚠ Step outside of the infrared field before launching a setup.

## QUICK SETUP



## ASSISTED SETUP



**TIP:** Launch an **ASSISTED SETUP** to verify wiring, position of the curtains and correct functioning of the sensor.

# SAFETY INSTRUCTIONS

- Test the good functioning of the installation before leaving the premises.
- The device cannot be used for purposes other than its intended use. All other uses cannot be guaranteed by the manufacturer of the sensor.
- The manufacturer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety.
- The manufacturer of the sensor cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.
- Only trained and qualified personnel may install and setup the sensor.
- The warranty is void if unauthorized repairs are made or attempted by unauthorized personnel.
- Avoid touching any electronic and optical components, avoid vibrations, do not cover the sensor and avoid proximity to neon lamps or moving objects.
- It is recommended to clean the optical parts at least once a year or more often if required due to environmental conditions.